HP Colo
Service M

'Click' to download complete Manual

invent

fineline6

service-repairmanual.com

HP Color LaserJet 4700 Series

service-repairmanual.com

Service Manual

fineline6

Copyright

© 2005 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Q7491-90932

Edition 1, 9/2005

FCC Class A Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense. The end user of this product should be aware that any changes or modifications made to this equipment without the approval of Hewlett-Packard could result in the product not meeting the Class A limits, in which case the FCC could void the user's authority to operate the equipment.

service-repair-manual.com

Trademark Credits

Adobe Photoshop® and PostScript are trademarks of Adobe Systems Incorporated.

CorelDRAW™ is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Linux is a U.S. registered trademark of Linus Trovalds.

Microsoft®, Windows®, MS-DOS®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Netscape™ and Netscape Navigator™ are U.S. trademarks of Netscape Communications Corporation.

PANTONE® Pantone, Inc's check-standard trademark for color.

UNIX® is a registered trademark of the Open Group.

TrueType™ is a U.S. trademark of Apple Computer, Inc.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency. Details on the proper use of the marks are explained in the "Guidelines for Proper use of the ENERGY STAR® Name and International Logo."

Safety Information

WARNING!

Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce the risk of injury from fire or electric shock.

fineline6

Table of contents

service-repairmanual.com

1 Product information

Printer configurations 2
HP Color LaserJet 4700 (part number Q7491A) 2
HP Color LaserJet 4700n (part number Q7492A) 3
HP Color LaserJet 4700dn (part number Q7493A) 3
HP Color LaserJet 4700dtn (part number Q7494A) 3
HP Color LaserJet 4700ph+ (part number Q7495A) 4
Printer features 5
Printer walkaround 8
Identification, site requirements, and specifications 10
Model and serial numbers 10
Power and regulatory label 10
Site requirements 11
Space requirements 12
Physical specifications 13
Electrical specifications 13
Environmental specifications 14
Acoustic emissions 14
Supply storage requirements 14
Skew specifications 15
Media specifications 16
Printing and paper storage environment 16
Envelopes 17
Envelopes that have double side seams 18
Envelopes that have adhesive strips or flaps 18
Envelope margins 18
Envelope storage 18
Labels 19
Label construction 19
Transparencies 19
Supported types and sizes of print media 20
Media to avoid 23
Media that can damage the printer 24
Printing on special media 25
Transparencies 25
Glossy paper 25
Colored paper 26
Envelopes 26
Labels 26
Heavy paper 26

fineline6

HP LaserJet Tough paper 27
Preprinted forms and letterhead 27
Recycled paper 28
Weight equivalence table 28
Environmental Product Stewardship program 30
Protecting the environment 30
Ozone production 30
Power consumption 30
HP LaserJet printing supplies 30
Disposal of waste equipment by users in private households in the European Union 32
Material safety data sheet 33
For more information 33
Hewlett-Packard Limited Warranty Statement 34
Print Cartridge Limited Warranty Statement 35
Country/region-specific safety statements 36
Laser safety statement 36
Canadian DOC statement 36
Japanese VCCI statement 36
Japanese cordset statement 36
Korean EMI statement 37
Taiwan safety statement 37
Finnish laser statement 38
Australia 38
Declaration of conformity (HP Color LaserJet 4700) 39

2 Service approach

Service approach 42
Parts and supplies 43
Ordering parts, supplies, and accessories over the Internet 43
Ordering directly through the embedded Web server (for printers with network connections) 43
Exchange program 43
Supplies 43
World Wide Web 43
HP Service Parts Information 44
HP available services 45
Ordering related documentation and software 47

3 Installation and configuration

What ships in the box 50
Unpacking the printer 51
Loading detectable standard-sized media into Tray 2 and optional trays 56
Connecting power 58
Installing a new control panel label 59
Testing the printer operation 60
Sleep delay 61
Setting sleep delay 61
Disabling/enabling sleep mode 61
Connecting to a computer 62
Parallel configuration 62

service-repairmanual.com

fineline6

USB configuration 62
Auxiliary connection configuration 63
HP Jetdirect print servers 64
Available software solutions 65
Wireless printing 65
IEEE 802.11 standard 65
Bluetooth 65
Printer software 66
Software 66
Software features 66
Driver Autoconfiguration 66
Update Now 66
HP Driver Preconfiguration 67
Installing the printing system software 67
Installing Windows printing system software for direct connections 67
Installing Windows printing system software for networks 68
Setting up a Windows computer to use the network printer with Windows-sharing 69
Installing the software after the parallel or USB cable has been connected 69
Uninstalling the software 69
Removing software from Windows operating systems 70
Software for networks 70
HP Web Jetadmin 70
UNIX 71
Utilities 71
Embedded Web server 71
Features 71
Other components and utilities 72
Printer drivers 73
Supported printer drivers 73
Additional drivers 73
Select the correct printer driver 74
Printer-driver Help (Windows) 74
Gaining access to the printer drivers 74
Printer drivers for Macintosh computers 76
Supported printer drivers 76
Gaining access to the printer drivers 76
Software for Macintosh computers 78
Installing Macintosh printing system software for networks 78
Installing Macintosh printing system software for direct connections (USB) 79
To remove software from Macintosh operating systems 80
Network configuration 81
Configuring TCP/IP parameters 81
Manually configuring TCP/IP parameters from the printer control panel 81
Setting an IP address 81
Setting the subnet mask 82
Setting the default gateway 83
Disabling network protocols (optional) 83
Disabling IPX/SPX 84
Disabling DLC/LLC 84

service-repairmanual.com

fineline6

Disabling AppleTalk 85
Setting network security on the printer 86
Locking the control panel 86
Levels of security 86
Using an ASCII PJL escape sequence to set network security 86

4 Maintenance

Cleaning the printer and accessories 90
Cleaning spilled toner 90
Vacuum specifications 90
Performing preventive maintenance 91
Managing the print cartridge 92
HP print cartridges 92
Non-HP print cartridges 92
Print cartridge authentication 92
Print cartridge storage 92
Print cartridge life expectancy 92
Checking the supply level 93
Using the control panel 93
Using the embedded Web server 93
Using HP Web Jetadmin 93
Approximate replacement intervals for supplies 94
ETB life 95
Changing print cartridges 96
Replacing a print cartridge 96
To replace the print cartridge 96
Replacing supplies 99
Locating supplies 99
Supply replacement guidelines 99
Making room around the printer for replacing supplies 100
Replacing the stapler cartridge 100
Replacing the ETB 103
Replacing the fuser 103
Printer memory and fonts 105
Installing a hard drive, memory, and fonts 106
Installing a hard drive 106
Installing DDR memory DIMMs 109
Installing a flash memory card 113
Enabling memory 117
To enable memory for Windows 98 and Me 117
To enable memory for Windows 2000 and XP 117
Installing an HP Jetdirect print server card 118
To install an HP Jetdirect print server card 118
Setting the real-time clock 122
Setting the date and time 122
To set the date format 122
To set the date 122
To set the time format 123
To set the time 123
Setting the wake time 124

service-manual.com

fineline6

To set the wake time 124
Setting the sleep delay 125
To set the sleep delay 125

5 Theory of operation

Basic operation 128
Operation sequence 128
Power on sequence 129
Internal components 131
Formatter system 133
Sleep mode 133
Image Resolution Enhancement technology (REt) 134
Input/Output 134
Parallel interface 134
USB 2.0 connector 134
ACC accessory port 134
Flash 135
Hard drive accessory 135
CPU 135
Printer memory 135
Read-only memory 135
Random-access memory 135
DIMM slots 135
Flash memory 135
Nonvolatile memory 135
PJL overview 136
PML 136
Control panel 136
Engine control system 137
DC controller PCB 137
Block operation 139
Motors, fans, and environment sensor 139
Failure detection 141
Drum motor failure detection 141
Fuser motor failure detection 142
ETB motor failure detection 142
Upper exhaust fan failure detection 142
Cartridge fan failure detection 142
Delivery fan failure detection 142
Power supply fan failure detection 142
Duplexer fan failure detection 143
Low-voltage power supply 143
Fuser control circuit 143
Low-voltage power supply circuit 145
Protective functions 146
Safety 147
Sleep mode 147
Power supply recognition 147
Heater temperature control 147
Initial rotation temperature control 148

service-repairmanual.com

fineline6

Start-up temperature control 148
Print temperature control 149
Between-sheets temperature control 149
Temperature protective function 149
Protective function by the CPU 149
Protective function by the fuser heater safety circuit 149
Protective function by the thermoswitch 150
Temperature failure detection 150
Start-up failure (warmup failure) 150
Abnormal low temperature of main thermistor (no conduction) 150
Abnormal high temperature of main thermistor 150
Abnormal low temperature of sub thermistor (no conduction) 151
Abnormal high temperature of sub thermistor 151
Drive circuit abnormality 151
High-voltage power supply 151
Generation of biases 152
Video interface control 154
Laser/scanner system 155
Laser control 156
Scanner control 157
Image formation system 159
Image formation process 161
Electrostatic latent image formation block 163
Step 1: Pre-exposure 163
Step 2: Primary charging 164
Step 3: Laser beam exposure 164
Development block 164
Step 4: Development 164
Transfer block 165
Step 5: Attraction 165
Step 6: Transfer 165
Step 7: Separation 166
Fusing block 166
Step 8: Fusing 166
Cleaning block 167
Step 9: Drum cleaning 167
Print cartridges 167
Memory tag 169
Cartridge presence detection 169
Memory tag detection 169
Photosensitive drum detection 169
Developing cylinder disengaging control 170
ETB (electrostatic transfer/transport belt) 170
Transfer roller (Y, C, M) engagement/disengagement detection 172
Transfer roller engagement/disengagement control 172
Calibration and cleaning 173
ETB cleaning 174
Color misregistration corrective control 175
Color misregistration detection 176
Image stabilization control 177

service-manual.com

fineline6

Environmental change control 178
Conditions leading up to DHALF 179
Image halftone calibration control (DHALF) 179
Image density detection 179
Pickup/feed system 181
Pickup/feed unit 186
Paper tray detection and paper tray media size detection 186
Paper tray pickup operation 187
Media lift-up operation 188
Initial lift-up 188
Lift-up during printing 188
Multiple-feed prevention 189
Skew correction 191
Media detection 192
Feed speed control 193
Fusing and delivery block 194
Loop control 194
Fusing pressure release mechanism 195
Jam detection 196
Pickup delay jam 197
Pickup stationary jam 197
Delivery delay jam 197
Door open jam 197
Residual paper jam 197
Reversing unit jam 1 197
Reversing unit jam 2 198
Duplexing pickup unit jam 1 198
Automatic delivery function 198
Duplex feed unit 198
Reversing/duplexing feed operation 199
Jam detection 201
Reversing unit jam 1 202
Reversing unit jam 2 202
Duplexing pickup unit jam 1 (Duplexing unit stationary jam) 202
500-sheet paper feeder 203
Pickup and feed operations 204
Stapler/stacker 206
Staple mode 206
Stacker mode 206
Offset mode 206
Messages 207

6 Removal and replacement

Removal and replacement strategy 210
Repair notices 210
Caution regarding electrostatic discharge (ESD) 210
Required tools 210
Types of screws 211
Parts-removal tree 212
User-replaceable parts 213

service-repairmanual.com

fineline6

Print cartridges and ETB 214
Fuser 214
Tray 1 pickup roller and separation pad 214
Tray 2-x separation roller 217
Tray 2-x feed and pickup rollers 218
Formatter 219
Compact flash 220
HP Jetdirect print server card 220
DDR memory DIMMs 220
Hard drive 220
Installing a new control panel label 220
Covers and external components 222
Paper tray (Tray 2) 223
Multipurpose tray (Tray 1) 223
Front cover 227
Duplex cover 231
Face down tray assembly 231
Top cover 232
Right cover 237
Left cover 239
Rear cover 241
Control panel 242
Main assemblies 245
Disengaging drive assembly 246
Main drive assembly 248
Pickup motor assembly 259
Lifter drive assembly 260
Delivery assembly 263
Paper feed assembly 268
Fuser drive assembly 271
Laser/scanner assembly 272
Motors and fans 282
Disengaging drive motor 283
Drum drive motors (Y/C/M/K) 283
Power supply fan/shroud (Fan 4) 284
Delivery fan/shroud (Fan 3) 285
Cartridge fan/shroud (Fan 2) 287
Upper exhaust fan (Fan 1) 290
Sensors and switches 293
Environment sensor 293
Power switch assembly 294
PCBs 297
DC controller PCB 297
Low-voltage power supply PCB 304
Memory controller PCB 306
E label memory contacts and cable 307
High-voltage power supply PCB 309
Toner level detection PCB 311
High-voltage contacts 311
500-sheet paper feeder 313

service-repairmanual.com

fineline6

500-sheet paper feeder right cover 314
500-sheet paper feeder rear cover 314
500-sheet paper feeder left cover 315
500-sheet paper feeder front cover 316
500-sheet paper pickup drive assembly 318
500-sheet paper feeder lifter drive assembly 322
500-sheet paper feeder pickup rollers 324
Stapler/stacker 325
Remove the stapler/stacker from the printer 325
Staple cartridge left cover 326
Output tray 326
Left cover 327
Top cover 327
Right cover 329
Staple cartridge 331
Stapler/stacker PCB 332
Stapler/stacker unit assembly 24v 2.5 amp 333
Duplexer 334
Top duplexing assembly 334
Duplex tray 334

7 Troubleshooting

Introduction 338
Troubleshooting process 340
Pre-troubleshooting checklist 340
Troubleshooting checklist 341
Troubleshooting flowchart 342
Power-on checks 343
Power-on troubleshooting overview 343
Control panel messages 345
Warning messages 345
Error messages 345
Critical error messages 345
Message listing 345
Formatter lights 381
Embedded HP Jetdirect LEDs 381
Heartbeat LED 382
Accessory lights 383
Interpreting stapler/stacker indicator light codes 383
Replacement parts configuration 386
Formatter and DC controller 386
Formatter (new or previously installed in another printer) 386
DC controller (new or previously installed in another printer) 387
Formatter and firmware compact flash 387
Paper path troubleshooting 388
Jams 388
Jam locations 388
Jam locations by error message 390
Jam recovery 391
To disable paper jam recovery 392

service-repairmanual.com

fineline6

Avoiding jams 392
Solving repeated jams 393
Persistent jams 393
Basic troubleshooting for jams 393
Data collection 394
General paper path troubleshooting 394
Paper path checklist 395
Jams in Tray 1 395
Jams in Tray 2 396
Jams in the paper path 397
Jams in the top cover 397
Jams in the duplex path 398
Common causes of paper jams 399
Paper jams 399
Clearing jams 400
Jam in Tray 1 400
Jam in Tray 2 or optional trays 401
Jams in top cover area 402
Clearing a jam in the top cover area 403
Clearing other jams 405
Jams in the stapler/stacker 408
Staple jams 414
Paper transport troubleshooting 417
Multiple pages are fed 417
Media is wrinkled or folded 417
Paper is skewed 418
Image formation troubleshooting 419
Print quality troubleshooting tools 419
Print quality problems associated with media 419
Overhead transparency defects 420
Print quality problems that are associated with the environment 421
Print quality problems that are associated with jams 421
Print quality troubleshooting pages 421
Understanding color variations 421
Common causes of color variation 422
Color selection process 422
Matching colors 422
PANTONE® color matching 422
Swatch book color matching 422
Using color 423
HP ImageREt 3600 423
Paper selection 423
sRGB 423
Adobe® RGB 424
CMYK+ 424
Color options 424
Print in grayscale 424
Automatic or manual color adjustment 425
Manual color options 425
Halftone options 425

service-repairmanual.com

fineline6

Neutral Grays 425
Edge Control 425
RGB Color 426
Adjusting color balance 426
To adjust color density 426
Web-downloadable color tables 427
Image defects 428
Light image 429
Light color 430
Dark image 430
Dark color 431
Completely blank image 431
All black or solid color 432
Dots in vertical lines 433
Dirt on the front or back of the paper 433
Vertical lines 434
White vertical lines 434
Horizontal lines 435
White horizontal lines 435
Missing color 435
Blank spots 436
Poor fusing 437
Distortion or blurring 438
Smearing 439
Misplaced image 439
Repetitive defects troubleshooting 440
Repetitive defect ruler 440
Interface troubleshooting 443
Communications checks 443
AUTOEXEC.BAT standard configurations 443
Parallel MS-DOS commands 443
Printer Job Language (PJL) commands 443
@PJL [Enter] 443
UEL 444
@PJL COMMENT 444
@PJL INFO CONFIG 444
@PJL INFO ID 444
@PJL INFO USTATUS 444
@PJL INFO PAGECOUNT 444
@PJL JOB 444
@PJL EOJ 445
@PJL ECHO 445
@PJL USTATUS JOB=ON/OFF 445
@PJL USTATUSOFF 445
Changing printer control panel configuration settings 446
Job storage limit 446
Setting the job storage limit 446
Job held timeout 446
Setting the job held timeout 446
Show IP address 447

service-repairmanual.com

fineline6

Showing the IP address 447
Color/black mix 447
Setting the color/black mix 447
Tray behavior options 448
Setting the printer to use the requested tray 448
Setting manually feed prompt 449
Setting the printer default for PS defer media 449
Setting the printer to use size/type prompt 450
Setting the printer to use another tray 450
Setting the printer to duplex blank pages 451
Setting the printer to rotate images 451
Sleep delay 451
Setting sleep delay 452
Disabling/enabling sleep mode 452
Wake time 452
Setting the wake time 453
Display brightness 453
Setting the display brightness 453
Personality 454
Setting the personality 454
Clearable warnings 454
Setting the clearable warnings 455
Auto continue 455
Setting auto continue 455
Replace supplies 456
Setting replace supplies response 456
Order at 456
Setting order at response 456
Color supply out 457
Setting color supply out response 457
Jam recovery 457
Setting jam recovery response 458
RAM disk 458
Changing RAM disk behavior 458
Language 458
Selecting the language 459
Selecting the language if the display is in a language you do not understand 459
Using the printer control panel in shared environments 459
Control panel troubleshooting 460
Printing a menu map 460
Information menu 460
Paper handling menu 462
Configure device menu 464
Printing submenu 464
PCL submenu 468
Print quality submenu 469
System setup submenu 472
Stapler/stacker submenu 476
I/O submenu 477

service-repumanuals.com

fineline6

Embedded Jetdirect submenu 478
Resets submenu 482
Diagnostics menu 483
Service menu 486
Tools for troubleshooting 487
Using the embedded Web server 487
Accessing the embedded Web server 487
Information tab 488
Settings tab 488
Setting the real-time clock 489
Networking tab 489
Other links 489
Configuration pages 489
Configuration page 489
HP embedded Jetdirect page 491
Paper handling configuration page 492
Finding important information on the configuration pages 493
Print the supplies status page 494
Print the usage page 495
Print the demo page 496
Print the file directory page 497
Print the PCL font list page 497
Print the PS font list page 498
Print the RGB samples page 499
Print the CMYK samples page 500
Diagnostics 502
LED diagnostics 502
Engine diagnostics 503
Diagnostics mode 503
Diagnostics that put the engine into the special diagnostics mode 503
Diagnostic tests 503
Individual diagnostic tests 504
Print the event log page 504
View the event log on the control panel display 505
Print the PQ troubleshooting pages 506
Diagnostics page 507
Disable cartridge check (special mode test) 508
Paper path sensors (special mode test) 509
Paper path test 509
Finishing paper path test 510
Manual sensor test (special mode test) 510
Manual sensor test 2 (special mode test) 513
Component test (special mode test) 514
Print/Stop test 517
Colorband test 517
Information menu 517
Configure device menu/printing menu 518
Configure device menu/print quality menu 518
Configure device menu/resets menu 518
Test pages 519

service-repairmanual.com

fineline6

Engine test page 519
Formatter test page 519
Engine resets 520
Cold reset 520
To perform a cold reset 520
NVRAM initialization 520
To initialize NVRAM 520
Hard disk initialization 521
To initialize the hard disk 521
Calibration bypass 521
To bypass calibration 521
Quick Calibrate Now 521
Full Calibrate Now 521
Service menu 523
Using the Service menu 523
Clear event log 523
Mono cycle count/Color cycle count 523
Serial number 523
Service ID 523
Restoring the Service ID 523
Converting the Service ID to an actual date 524
Cold reset paper 524
Diagrams 525
Main parts 525
Switches 527
Sensors 528
Solenoids 529
Motors and fans 530
PCBs 531
DC controller PCB 532
Connectors 533
General timing chart 539
General circuit diagrams 540

8 Parts and diagrams

Introduction 544
Ordering parts and supplies 545
Parts that wear 545
Parts 545
Customer support 545
Supplies and accessories 545
Common fasteners 548
User-replaceable parts 549
Assembly locations 552
Major components 552
External covers and panels 554
Internal components 558
Accessories 594
Alphabetical parts list....612
Numerical parts list....618

servicemanual.com

fineline6

Index.....625

service-repairmanual.com

fineline6

Printer configurations

This manual describes the HP Color LaserJet 4700 series printer. This printer is available in the configurations described below.

HP Color LaserJet 4700 (part number Q7491A)

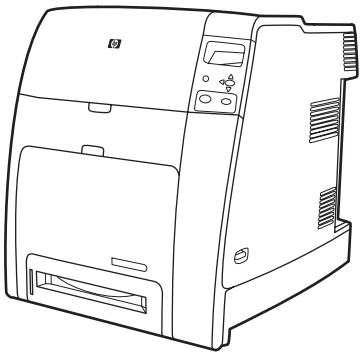

The HP Color LaserJet 4700 printer is a four-color laser printer that prints up to 31 pages per minute (ppm) for letter-sized paper and up to 30 ppm for A4-size paper.

- **Trays**. The printer comes with a multipurpose tray (Tray 1) that holds up to 100 sheets of various print media or 20 envelopes. A standard 500-sheet paper feeder (Tray 2) supports letter, legal, executive, 8.5 x 13, JIS B5, executive (JIS), 16K, A4, and A5, and custom media. The printer can support up to four optional 500-sheet paper feeders (Trays 3, 4, 5, and 6).
- **Connectivity**. The printer provides parallel and auxiliary ports for connectivity. Two enhanced input/output (EIO) slots, wireless connectivity capability with optional print server, auxiliary port, universal serial bus (USB) and accessory connections, and bidirectional parallel cable interface (IEEE-1284-C compliant) are standard.
- **Memory**. 160 megabytes (MB) of memory: 128 MB of dual data-rate (DDR) synchronous dynamic random access memory (SDRAM), 32 MB of memory on the formatter board, and one open dual inline memory module (DIMM) slot.

NOTE To allow memory expansion, the printer has an available 200-pin small outline dual inline memory module (SODIMM) slot that accepts 128 or 256 MB RAM. The printer can support up to 544 MB of memory: 512 MB of memory in SODIMMs, plus 32 MB additional memory on the formatter board. An optional hard drive is also available.

service-repairmanuals.com

fineline6

HP Color LaserJet 4700n (part number Q7492A)

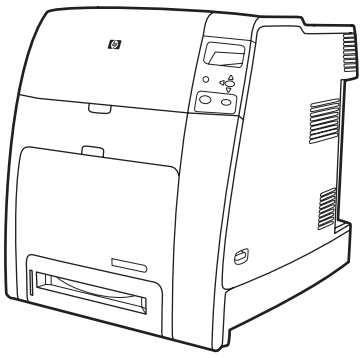

The HP Color LaserJet 4700n printer includes the features of the 4700, plus the HP Jetdirect embedded print server (RJ-45 port) for network connectivity.

HP Color LaserJet 4700dn (part number Q7493A)

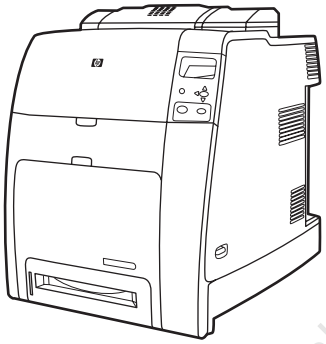

The HP Color LaserJet 4700dn printer includes the features of the 4700n, plus a duplexer for automatic two-sided printing, and an additional 128 MB of memory for a total of 288 MB of memory (256 MB of DDR SDRAM and 32 MB of memory on the formatter board).

service-manual.com

HP Color LaserJet 4700dtn (part number Q7494A)

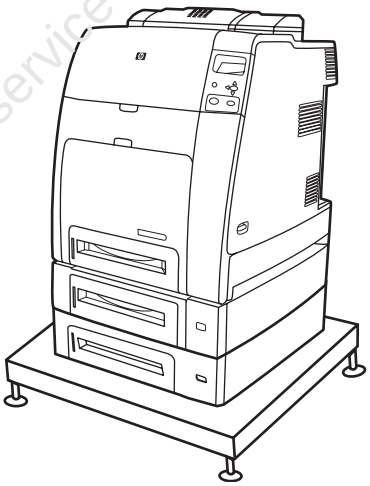

fineline6

The HP Color LaserJet 4700dtn includes all the features of the 4700dn, two additional 500-sheet paper feeders (Trays 3 and 4), and a printer stand.

HP Color LaserJet 4700ph+ (part number Q7495A)

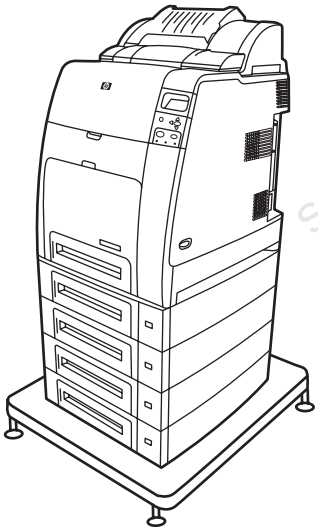

The HP Color LaserJet 4700ph+ includes the features of the 4700dtn, two additional 500-sheet paper feeders (Trays 5 and 6), a high-capacity stapler/stacker, a printer stand, a hard drive, and an additional 256 MB of memory for a total of 544 MB of memory.

NOTE 544 MB of SDRAM: 512 MB of DDR, plus 32 MB of additional memory on the formatter board and an additional DIMM slot. This printer has two 200-pin small outline dual inline memory module (SODIMM) slots that accept 128 or 256 MB of RAM each.

service-repairmanual.com

fineline6